

## 6. Rear Differential Side Oil Seal

### A: INSPECTION

Make sure that there is no leakage from side oil seal. If there is any leakage, replace the oil seal.


### B: REPLACEMENT

1) Remove the rear differential. <Ref. to DI-16, REMOVAL, Rear Differential (VA-type).>

2) Remove the rear differential side oil seal using a screwdriver wrapped with vinyl tape to prevent the side retainer from scratches.

3) Using the ST, install the oil seal to the side retainer.

ST 398437700 DRIFT

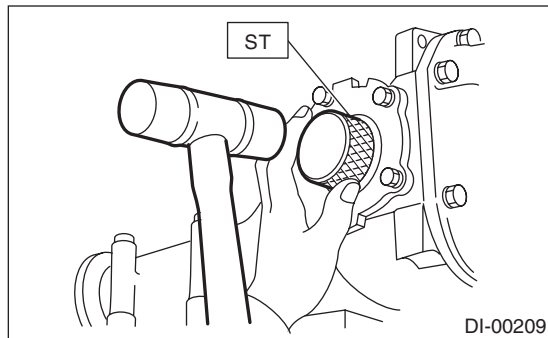

4) Install the rear differential. <Ref. to DI-17, INSTALLATION, Rear Differential (VA-type).>